Specifications

CD changer (CDX-530RF)

Compact disc digital audio System system

Laser Diode Properties

GaAlAs Material Wavelength 780 nm **Emission Duration** Continuous Less than 44.6 µW* Laser output power

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

Transmitting frequency

88.3 MHz/88.5 MHz/ 88.7 MHz/88.9 MHz/ 89.1 MHz/89.3 MHz/ 89.5 MHz/89.7 MHz/ 89.9 MHz/(switchable)

Input/output terminals Wired remote control (8 pin)

RF signal (FM) output Power input (3 pin) 800 mA (at playback) Current drain 800 mA (at disc loading/

ejecting)

Operating temperature

-10°C to +55°C (14°F to 131°F) Approx. $262 \times 90 \times 181.5$ mm $(10^{3}/8 \times 3^{5}/8 \times 7^{1}/4 \text{ in.})$

(w/h/d)Approx. 2.1 kg (4 lb. 10 oz.) Mass

Relay box

Input/output Antenna input terminal Antenna output cord

CD Changer input cord Dimensions $(1^{5}/8 \times 1^{5}/8 \times 1^{1}/8 \text{ in.})$

(w/h/d)

Wired remote (RM-X87) /Wireless remote (RM-X89)

Wired remote: Dimensions

Approx. $122 \times 36.5 \times 15.5$ mm $(4^{13}/8 \times 1^{7}/16 \times 5/8 \text{ in.}) (w/h/d)$ Wireless remote:

Approx. $40 \times 6.5 \times 86 \text{ mm}$ (1 $^{5}/8 \times ^{9}/32 \times 3$ $^{1}/2 \text{ in.}$) (w/h/d) Wired remote:

Approx. 255 g (9 oz.) Wireless remote: Approx. 20 g (1 oz.) Wireless remote: Lithium battery (CR2025) Battery

Supplied accessories

Disc magazine (1) Parts for installation and connections (1 set)

Optional accessories

CD single adaptor CSA-8 Disc magazine XA-250

Design and specifications are subject to change without notice.

Spécifications

Changeur de CD (CDX-530RF)

Système audionumérique à Système disque compact

Fréquence de transmission 88.3 MHz/88.5 MHz/

88,7 MHz/88,9 MHz/ 89,1 MHz/89,3 MHz/ 89.5 MHz/89.7 MHz/ 89,9 MHz/(réglable)

Bornes d'entrée/sortie Télécommande filaire (8 broches)

Sortie du signal RF (FM) Entrée d'alimentation (3 broches)

Consommation de courant

800 mA (lecture) 800 mA (charge/éjection de

disque) Température de fonctionnement

-10°C à + 55°C (14°F à 131°F) Env. 262 × 90 × 181,5 mm Dimensions $(10^{3}/8 \times 3^{5}/8 \times 7^{1}/4 \text{ po.})$

Env. $\hat{2}{,}1~kg$ (4 liv. 10 on.) Poids

Boîte de relais

Dimensions

Borne d'entrée d'antenne Entrée/sortie

Câble d'entrée du changeur CD $40 \times 40 \times 27 \text{ mm}$

 $(1^{5}/8 \times 1^{5}/8 \times 1^{1}/8 \text{ po.}) (l/h/p)$ Poids 140 g (5 on.)

Télécommande à fil (RM-X87)/ télécommande sans fil (RM-X89)

Dimensions Télécommande à fil:

Env. $122 \times 36,5 \times 15,5$ mm $(4^{3}/8 \times 1^{7}/16 \times {}^{5}/8 \text{ po.}) (l/h/p)$ Télécommande sans fil:

Env. $40 \times 6.5 \times 86$ mm $(1^{5}/8 \times {}^{9}/32 \times 3^{1}/2$ po.) (l/h/p) Télécommande à fil: Poids

Env. 255 g (9 on.) Télécommande sans fil-Env. 20 g (1 on.)

Pile Pile au lithium (CR2025)

Accessoires fournis

Chargeur de disques (1) Pièces de montage et de raccordement (1 jeu)

Accessoires en option

Adaptateur pour CD de 8 cm Chargeur de disques XA-250


Conception et spécifications modifiables sans préavis.

Installing the battery

Replace the battery with a Sony CR2025 or Duracell DL-2025 lithium battery. Use of another battery may present a risk of fire or explosion.

Installation de la pile

Remplacez la pile par une pile au lithium ${\rm CR}2025$ Sony ou DL-2025 Duracell. L'utilisation d'une autre pile comporte un risque d'incendie ou d'explosion.

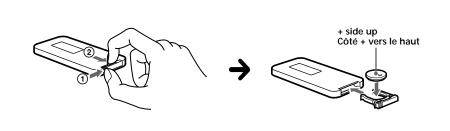

Lithium battery life

When the battery becomes weak, you will not be able to operate the unit with the wireless remote. Battery life is approx. six months depending on the conditions of use.

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in

Notes on the lithium battery

- Keep the lithium battery out of the reach of children.
 Should the battery be swallowed, immediately Wipe the battery with a dry cloth to assure a good
- contact.
- Be sure to observe the correct polarity when
- installing the battery.

 Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

Autonomie de la pile au lithium

Lorsque les piles s'épuisent, il ne vous sera plus possible de commander l'appareil à l'aide de la télécommande sans fil. L'autonomie de la pile est d'environ six mois

suivant les conditions d'utilisation.

ATTENTION

médecin.

Utilisée de façon incorrecte, la pile peut exploser. Ne pas la recharger, la démonter ni la ieter au feu.

Remarques sur la pile au lithium

- Gardez les piles au lithium hors de la portée des enfants. En cas d'ingestion, consultez immédiatement un
- Essuvez la pile à l'aide d'un chiffon sec de facon à assurer un bon contact.
- Respectez la polarité de la pile lorsque vous
- l'installez. Ne saisissez pas la pile à l'aide d'une pince métallique, sinon vous risquez de provoquer un court-circuit



3-867-765-11 (1)

Compact Disc Changer System

Operating Instructions Mode d'emploi

Owner's Record

The model and serial numbers are located at the rear of the CD changer. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this

Model No. CDX-530RF Serial No.

For installation and connections, see the supplied installation/connections manual.

En ce qui concerne l'installation et les connexions, consulter le manuel d'installation/ connexions fourni.



CDX-530RF

Sony Corporation © 2000 Printed in Thailand

For the customers in the USA

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.


CAUTION

The use of optical instruments with this product will increase eye hazard.

Features

The CDX-530RF is a compact disc changer system comprised of the wired and wireless remote commanders, the relay box, and the CD changer. The CD changer modulates the audio signal into the RF (Radio Frequency) signal so that it can be received by the existing FM tuner of your car audio. Therefore you will be able to enjoy CD play with your car audio even if it has no input terminals for a compact disc player.

- Compact and space saving CD changer for vertical, horizontal, suspended, or inclined installation in your car.
- Supplied wired remote enables you to control the CD changer installed in the trunk room of your car.
- Repeat play function for playing a track or a disc repeatedly. • Shuffle play function for playing tracks of
- one disc or of all discs in random order. • CD TEXT function* for displaying the CD TEXT information on the display of the
- supplied wired remote. • Supplied wireless remote (RM-X89) which can be operated almost like the wired remote
- (RM-X87). * Only available when playing back a CD TEXT disc

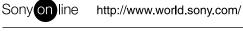

Caractéristiques

Le CDX-530RF est un système de changeur de disques compacts comprenant des télécommandes avec et sans fil, une boîte de relais et un changeur CD. Le changeur CD module le signal audio en signal RF (fréquence radio) de sorte qu'il peut être capté par le syntoniseur FM existant de votre autoradio. Åinsi, vous pouvez écouter des disques compacts en voiture même si votre autoradio n'est pas équipé de bornes d'entrée pour lecteur

- Changeur de CD compact et peu encombrant pouvant être installé verticalement, horizontalement, en suspension ou en oblique dans votre voiture.
- La télécommande filaire fournie vous permet de commander le changeur CD installé dans le coffre de votre voiture.
- Lecture répétée pour écouter plusieurs fois une plage ou un disque.
- Lecture aléatoire pour écouter les plages d'un disque ou de tous les disques dans un ordre quelconque.
 • La fonction* CD TEXT permettant d'afficher
- les informations CD TEXT sur l'écran d'affichage de la télécommande filaire fournie.
- La télécommande sans fil fournie (RM-X89) s'utilise pratiquement de la même façon que la télécommande filaire (RM-X87). Uniquement disponible lors de la lecture d'un

Inserting a disc

Use the supplied disc magazine or the disc magazine XA-250. The disc magazine XA-10B can not be used with this unit. If you use any

Insertion d'un disque

Labeled surface up With the arrow side facing up Face imprimée vers le haut Avec le côté portant la flèche orienté vers le haut 10 discs, one in each tray Tab 10 disques, un par plateau other disc magazine, it may cause a malfunction.

• To listen to an 8 cm (3 in.) CD, use the optional Sony CD adaptor CSA-8. Be sure to always use the specified adaptor, as failing to do so may cause a malfunction of the unit. If you use any other adaptor, the unit may not operate properly. When using the Sony CD adaptor, make sure that the three catches on the adaptor are firmly latched


onto the 8 cm (3 in.) CD.


Do not insert the Sony CD adaptor CSA-8 in the disc magazine without a disc, malfunction may result

Utilisez le magasin à disques fourni ou un magasin à disques XA-250. Vous ne pouvez pas utiliser de magasin à disques XA-10B avec cet appareil. L'utilisation d'un autre type de magasin à disques risque de provoquer un dysfonctionnement.

Pour écouter un CD de 8 cm (3 po.) CD, utilisez l'adaptateur CD Sony en option CSA-8. Veillez à toujours utiliser l'adaptateur spécifié, faute de quoi vous risquez de provoquer un dysfonctionnement de l'appareil. Si vous utilisez un autre adaptateur, l'appareil risque de ne pas fonctionner correctement. Lorsque vous employez l'adaptateur CD Sony, assurez-vous que les trois encoches de l'adaptateur soient fermement engagées sur le CD de 8 cm (3 po.).


N'introduisez pas l'adaptateur CD Sony CSA-8 dans le chargeur sans disque, car il pourrait en résulter un dysfonctionnement.

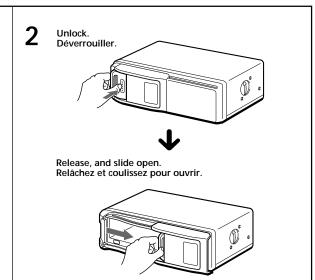

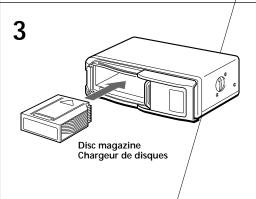

If the disc magazine does not lock properly Take out the disc magazine, press ♠, and re-insert it.

Si vous ne pouvez pas fermer le chargeur de disques Retirez le chargeur, appuyez sur ≜ et réintroduisez-le.

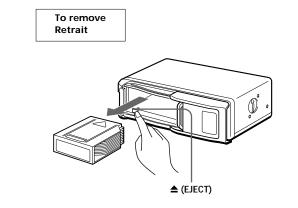

4



Use the unit with the door closed

Otherwise, foreign matter may enter the unit and contaminate the lenses inside the CD changer.

Utiliser cet appareil avec la trappe fermée


Sinon, des corps étrangers pénètreront dans l'appareil et encrasseront les lentilles à l'intérieur du changeur CD.

Notes on the disc magazine

- Do not leave the disc magazine in locations with high temperature and high humidity, such as on a car dashboard or in the rear window where the disc magazine will be subject to direct sunlight.
- Do not place more than one disc at a time onto a tray, otherwise the CD changer and the discs may be
- Do not drop the disc magazine or subject it to a violent shock.

When the tray comes out

Normally, the trays will not come out of the disc magazine. However, if they are pulled out of the disc magazine, it is easy to re-insert them.

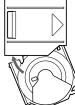

With the cut-away portion of the tray facing you, insert the right corner of the tray in the slot, then push in the left corner until it clicks.

Do not insert the tray upside down or in


the wrong direction.

Remarques sur le chargeur de disques

- N'abandonnez pas le chargeur de disques dans des endroits affichant des températures et une humidité élevées, tels que sur le tableau de bord d'une voiture ou sur la plage arrière où le chargeur de disques sera soumis aux rayons directs du soleil.
- Ne placez pas plus d'un disque à la fois sur le plateau, sinon le changeur de CD et les disques risquent
- Ne pas laisser tomber le chargeur de disques ni le cogner.

Si un plateau s'enlève

En principe, les plateaux ne s'enlèvent pas du magasin. S'ils s'enlèvent du magasin, il est cependant facile de les y

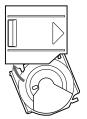

L'encoche du plateau étant face à vous, introduisez l'angle droit du plateau dans la fente et poussez ensuite sur l'angle gauche jusqu'à ce qu'il s'encliquette.

Remarque N'introduisez pas le plateau à l'envers ni

Notes on/compact discs

A dirty or defective disc may cause sound drop-outs during CD playback. To enjoy optimum sound, handle the disc as follows.

- Handle the disc by its edge, and do not touch the unlabled surface. (fig. A)
- Do not/stick paper or tape on the disc. (fig. B)
- Do not expose the discs to direct sunlight or heat sources such as hot air-ducts. Do not leave the discs in a car parked in direct sunlight where there can be a considerable rise in temperature inside the car. (fig. C)
- Beføre playing, clean the discs with an optional cleaning cloth. Wipe each disc in the direction of the arrows. (fig. D)
- $D\phi$ not use solvents such as benzine, thinner, commercially available cleaner, or antistatic spray intended for analog discs.

Notes on discs

If you use the discs explained below, the sticky residue can cause the CD to stop spinning and may cause malfunction or ruin your discs.

Oo not use second-hand or rental CDs that have a sticky residue on the surface (for example, from peeled off stickers or from ink, or glue leaking from under the stickers).

- There are paste residue. Ink is sticky. (fig. E)
- Do not use rental CDs with old labels that are beginning to peel off.
- Stickers that are beginning to peel away, leaving a sticky residue. (fig. F) Do not use your CDs with labels or stickers attached.
- · Labels are attached. (fig. G)

Remarques sur les disques compacts

Un disque souillé ou défectueux peut provoquer des coupures de son pendant la lecture d'un CD. Pour obtenir un son optimal, manipulez les disques comme suit.

- Saisissez les disques par les bords et n'en touchez jamais la surface. (fig. A)
- Ne collez pas de papier ni de bande adhésive sur le disque. (fig. B)
- · N'exposez pas les disques au rayonnement direct du soleil ni à des sources de chaleur comme des conduits d'air chaud. Ne laissez pas les disques dans une voiture parquée en plein soleil où la température intérieure de l'habitable risque d'augmenter considérablement. (fig. C)
- Avant la lecture, essuyer les disques avec un chiffon de nettoyage optionnel. Essuyer chaque disque dans le sens des flèches. (fig. D)


Ne pas utiliser de solvants tels que de la benzine, du diluant, des produits de nettoyage vendus dans le commerce ou des vaporisateurs anti-statiques destinés aux disques analogiques.

Remarques sur les disques

Si vous utilisez les disques expliqués ci-dessous, le résidu collant peut provoquer l'arrêt du disque et entraîner un dysfonctionnement ou abîmer vos disques.

N'utilisez pas de disques de seconde main ou de location qui présentent des résidus collants sur leur surface (par exemple d'étiquettes décollées ou d'encre, ou encore de colle débordant sous l'étiquette). • Il s'agit de résidus de colle. L'encre est collante. (fig. E)

- N'utilisez pas de CD de location avec de vieilles étiquettes qui commencent à se décoller. • Les étiquettes qui commencent à se décoller laissent des résidus collants. (fig. F) N'utilisez pas vos CD avec des étiquettes ou des autocollants fixés.
- Les étiquettes sont fixées. (fig. G)

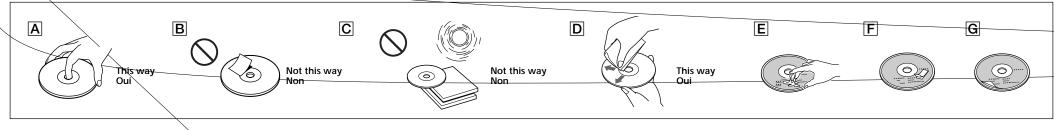

Moisture condensation

On a rainy day or in a very damp area, moisture may condense on the lenses inside the unit, and the unit will not operate properly. In such a case, remove the disc magazine and wait for about an hour until the moisture has evaporated.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Remarque sur la condensation d'humidité

Les jours de pluie et dans les régions très humides, il se peut que de l'humidité se condense sur l'objectif à l'intérieur de l'appareil, qui risque alors de ne pas fonctionner correctement. Dans ce cas, retirez le chargeur de disques et attendez environ une heure que l'humidité se soit évaporée.

Si vous avez des questions ou des problèmes au sujet de votre appareil qui ne sont pas abordés dans le présent mode d'emploi, consultez votre revendeur Sony.

Operation

Precautions


- This unit cannot be used with a car audio without FM tuner.
- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- Avoid installing the CD changer, wireless remote, and wired remote in places:

 subject to temperature exceeding 55°C (131°F).
- subject to direct sunlight. near heat sources (such as heaters).
- exposed to rain or moisture.
- exposed to excessive dust or dirt. subject to excessive vibration.

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

Resetting the unit

Press the reset button with a pointed object, such as a ball-point pen, etc.

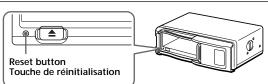

Listening to a CD

- 1 Turn on the FM tuner of your car audio.
- 2 Tune in the selected transmitting frequency* with the FM tuner of your car audio.

 * The frequency of the unit is set to 88.3 MHz at the
- You can change the frequency. (See "Changing the transmitting frequency" below.)
- 3 Press ►II.
 - CD playback starts.
- 4 Adjust the volume with the volume control on your car audio. All the tracks play from the beginning

Stopping CD play

Press OFF

Notes

- When CD playback stops, you may hear some noise from the speakers. To prevent this from happening, turn the volume down before stopping CD playback.
- If you turn off the ignition switch of your car without stopping CD playback, it will automatically resume CD playback from where it was stopped when you turn on the ignition switch again.

Listening to the radio or a tape

Be sure to stop CD playback before you start listening to the radio or a tape

Be sure to stop CD playback, otherwise there may be some interference with radio reception.

Playing tracks in random order

- Shuffle Play

- You can select:
 SHUF 1 to play the tracks on the current disc in random
- SHUF 2 to play all the discs in random order. Press (SHUF/REP) repeatedly until the desired setting appears (SHUF1 or SHUF2).

After five seconds, the shuffle play starts. Each time you press (SHUF/REP), the display changes as follows

► SHUF 1 → SHUF 2 → REP 1* → REP 2* Cancel (SHUF off) 4

* These indications do not appear in operation with the wireless remote. To go back to the normal playback mode, press (SHUF/REP) repeatedly until the "SHUF" or "REP"

Using on the wireless remote

Press (SHUF) repeatedly until the desired setting

Playing tracks repeatedly

- Repeat Play
- You can select:

disappears.

 REP 1 to repeat the track. REP 2 to repeat the disc.

Press (SHUF/REP) repeatedly until the desired setting appears (REP1 or REP2).
After five seconds, the repeat play starts.

Each time you press (SHUF/REP), the display changes

→ SHUF 1* → SHUF 2* → REP 1 → REP 2 -Cancel (REP off) ◀

* These indications do not appear when in operation

with the wireless remote To go back to the normal playback mode, press SHUF/REP repeatedly until "REP" or "SHUF"

Using on the wireless remote

Press (REP) repeatedly until the desired setting appears.

Labelling a CD — Disc Memo

(CD changer with custom file function)

You can label each disc with a personalized label. Use the wireless remote to enter and erase the characters.

1 Press (DSPL/- EDIT) for two seconds until the first character flashes.

2 Input the characters.

• Press NAME
• or
• to select the desired $(A \rightarrow B \rightarrow C \rightarrow 7 \rightarrow 0 \rightarrow 1 \rightarrow 2 \rightarrow$ $\dots 9 \rightarrow + \rightarrow - \rightarrow * \rightarrow / \rightarrow \backslash \rightarrow > \rightarrow < \rightarrow$

Press NAME \oplus to display the available characters. If you press NAME \bigcirc , the characters will appear in reverse order.

If you wish to put a blank space after a character, select "_" (under-bar).

An alternative method to erase a title You can erase a title by selecting eight "_"s (under-

2 Press (ENTER/- DELETE) after locating the desired character. The next character flashes.

3 Repeat steps 1 and 2 to enter the entire title. Up to eight characters can be entered per disc.

To return to the normal CD playback mode, press DSPL/- EDIT) for two seconds

Displaying the disc memo

Press (DSPL-SCRL) during CD playback.

Each time you press (DSPL-SCRL) during CD playback, the display changes as follows:

➤ Elapsed playback time → Disc name

-Track name 🗲 Using on the wireless remote

Press (DSPL/- EDIT) to change the display.

- If a disc has not been assigned a personalized label,
 "******* or "NO NAME" will appear on the display.
- The CD TEXT information appears only when a CD
- TEXT disc is played back. If you use personalized labels, they will always take
- priority over the original CD TEXT information when such information is displayed.
- "**WAIT**" appears in the display while the unit is reading the data. The system shows the CD TEXT information with
- alphabetic characters, numbers, and symbols. (The lowercase characters contained in the CD TEXT disc are automatically converted to uppercase.)

Erasing the disc memo

- 1 Play the CD and press (DSPL/- EDIT) for two
- 2 Press ENTER/- DELETE for two seconds until DISC NAME indication flashes.
- 3 Press NAME (+) or (-) to select the title that you wish to erase.
- Press (ENTER/- DELETE) to make DISC NAME indication and the disc name flash.
- Press (ENTER/- DELETE) again. The title is erased. Repeat steps 2 through 4 if necessary.
- 6 Press DSPL/- EDIT for two seconds.
- The unit returns to the normal CD playback mode.

Changing the transmitting frequency

Because this unit processes CD playback sound through an FM tuner, there may be interference noise during CD playback. In such a case, change the frequency of the modulated RF signal transmitted from the unit. The initial setting is 88.3 MHz.

 $1 \ \, \text{Press} \, \, \underbrace{\text{SHUF/REP}} \, \text{for two seconds until frequency}$ appears.

Fonctionnement

Précautions

- Cet appareil ne peut être utilisé avec un autoradio sans syntoniseur FM.
- Si votre voiture est parquée en plein soleil, provoquant ainsi une augmentation considérable de la température dans l'habitacle, laissez l'appareil refroidir avant de l'utiliser.
- Si l'appareil n'est pas alimenté, vérifiez d'abord les connexions. Si tout est en ordre, contrôlez le fusible.
 Evitez d'installer le changeur de CD, la télécommande sans fil et la télécommande à fil dans un endroit :
- où la température peut dépasser 55°C (131°F), — en plein soleil,
- près d'une source de chaleur (comme un chauffage).
- exposé à la pluie ou à l'humidité,
- poussiéreux ou sale,
- exposé à des vibrations fortes.

Réinitialisation de l'appareil


Avant la première mise en service de cet appareil ou après avoir remplacé la batterie de la voiture, vous devez réinitialiser

Appuyez sur la touche de réinitialisation à l'aide d'un objet pointu comme un stylo à bille, etc.



Lecture d'un CD

- 1 Allumez le syntoniseur FM de votre autoradio.
- 2 Accordez la fréquence de transmission^{*} sélectionnée au moyen du syntoniseur FM de votre
 - La fréquence de l'appareil est réglée par défaut sur
 - Vous pouvez modifier la fréquence. (Voir "Changement de la fréquence de transmission", ci-
- 3 Appuyez sur ►II.
- La lecture du CD démarre.
- 4 Ajustez le volume avec la commande de volume de votre autoradio. Toutes les plages sont reproduites à partir du début.

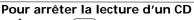

Appuyez sur OFF).

Remarques

- Lorsque vous arrêtez la lecture d'un CD, il se peut que vous entendiez des parasites dans les haut-parleurs. Pour éviter ce phénomène, baissez le volume avant d'arrêter la lecture du CD.
- Si vous coupez le contact de votre voiture sans avoir arrêté la lecture du CD, il reprendra automatiquement la lecture du CD à l'endroit où vous l'avez arrêté lorsque vous rétablirez le contact.

Ecouter la radio ou une cassette

Arrêtez la lecture du CD avant d'écouter la radio ou une

Remarque

Si vous n'arrêtez pas la lecture du CD, des interférences risquent de se produire avec la réception radio.

Lecture des plages dans un ordre quelconque

- Lecture aléatoire

- Vous pouvez sélectionner:
- SHUF 1 pour lire les plages du disque en cours dans un
- SHUF 2 pour lire tous les disques dans un ordre aléatoire

Appuyez plusieurs fois sur (SHUF/REP) jusqu'à ce que le réglage souhaité apparaisse (SHUF1 ou SHUF2).

La lecture aléatoire commence dans les cinq secondes qui suivent.

A chaque pression sur (SHUF/REP), l'affichage change de la façon suivante:

→ SHUF 1 → SHUF 2 → REP 1* → REP 2* -Annulation (SHUF hors service) ◀

* Ces indications n'apparaissent pas lors de l'utilisation de la télécommande sans fil. Pour revenir au mode de lecture normale, appuyez plusieurs fois sur (SHUF/REP) jusqu'à ce que "SHUF" ou "REP" disparaisse.

Utilisation de la télécommande sans fil

Appuyez plusieurs fois sur (SHUF) jusqu'à ce que le réglage désiré apparaisse.

Répétition de plages

Lecture répétée

Vous pouvez sélectionner: • REP 1 pour répéter une plage.

• REP 2 pour répéter tout un disque. Appuyez plusieurs fois sur SHUF/REP jusqu'à ce que le réglage souhaité apparaisse (REP1 ou REP2). La lecture répétée commence dans les cinq secondes

A chaque pression sur (SHUF/REP), l'affichage change


de la façon suivante: → SHUF 1* → SHUF 2* → REP 1 → REP 2 Annulation (REP hors service) ◆


l'utilisation de la télécommande sans fil. Pour revenir au mode de lecture normale, appuyez plusieurs fois sur (SHUF/REP) jusqu'à ce que "REP" ou

Ces indications n'apparaissent pas lors de

"SHUF" disparaisse Utilisation de la télécommande sans fil

Appuyez plusieurs fois sur (REP) jusqu'à ce que le réglage désiré apparaisse.

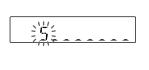

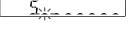



2 Press DISC+ or DISC- repeatedly to select the

frequency.
Each time you press DISC+ or DISC-, the frequency change as follows:

 $\boxed{\text{DISC-}}: 88.3 \text{ MHz} \rightarrow 89.9 \text{ MHz} \rightarrow 89.7 \text{ MHz} \rightarrow$ $89.5 \text{ MHz} \rightarrow 89.3 \text{ MHz} \rightarrow 89.1 \text{ MHz} \rightarrow$ 88.9 MHz \rightarrow 88.7 MHz \rightarrow 88.5 MHz \rightarrow \bigcirc B8.3 MHz \rightarrow 88.5 MHz \rightarrow 88.7 MHz \rightarrow $88.9 \text{ MHz} \rightarrow 89.1 \text{ MHz} \rightarrow 89.3 \text{ MHz} \rightarrow$ $89.5 \, \mathrm{MHz} \rightarrow 89.7 \, \mathrm{MHz} \rightarrow 89.9 \, \mathrm{MHz} \rightarrow$

3 Press (SHUF/REP) for two seconds.

Using on the wireless remote

1 Press SHUF for two seconds until frequency appears.

2 Press DISC+) or DISC-) repeatedly to select the frequency

3 Press SHUF for two seconds.

Notes

- When you change the transmitting frequency on the unit, be sure to tune your FM tuner to the newly
- Press ►II on the wired remote before changing the frequency if the power to the unit is turned off

Changing the output level

You can select the output level from the unit. Normally the unit is used at the initial output level; change the level if necessary.

LEVEL Initial setting


LEVEL

LEVEL 5

Nomenclature


 $2 \ \, \text{Appuyez plusieurs fois sur} \, \, \underline{\text{\tiny DISC+}} \, \, \text{ou} \, \,$

Wireless remote (RM-X89) Télécommande sans fil (RM-X89)

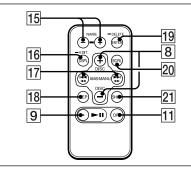

Location and function of controls

Wired remote (RM-X87) Télécommande à fil (RM-X87)

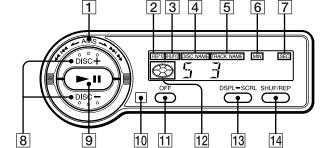

1 AMS (Automatic Music Sensor/manual search)

Depending on which side of the control you push down, you can select from the following functions.

- 2 REP (repeat play) indication
- 3 SHUF (shuffle play) indication
- 4 DISC NAME (disc number/disc name) indication The indicated disc number matches the disc number in the disc magazine.
- 5 TRACK NAME (track number/track name) indication
- 6 MIN (minute) indication
- 7 SEC (second) indication
- 8 DISC buttons

Depending on which side of the button you press, you can select from the following functions.

9 ►II (play/pause) button

If pressed during CD playback, the CD will pause. If pressed again, CD playback will continue

AMS function To locate the beginning of a track, push down

▶► to locate the beginning of the next track. ★ to locate the beginning of the track currently played.

If you push down the control repeatedly, the beginnings of all following or previous tracks will be located until the end of the disc is reached.

Manual search function

To quickly locate a desired point of a track, push down and hold

▶► to fast-forward. ◀◀ to fast-reverse.

The elapsed playing time of the track will be shown in the display window during manual search.

Disc select function

To select a desired disc, press momentarily

(DISC+) to select the next disc.

DISC-) to select the previous disc.

Troubleshooting guide

The following checklist will assist in the correction of most problems which you may encounter with your unit. Before going through the checklist below, refer to the connection and operating procedures.

General

Problem	Cause/Solution	
The unit does not function.	 The built-in micro computer has malfunctioned. → Press the reset button the CD changer. The connecting cords are not connected properly. 	
The sound skips.	 The CD changer is installed in an unstable location. → Re-install it in a stable location. The CD is dirty or defective. → Clean or replace it. 	
The disc magazine is not locked in the CD changer.	Take out the disc magazine, press \triangle , and re-insert the disc magazine until it is locked securely.	

Error displays

The following indications will flash for about five seconds.

Cause	Solution
The disc magazine is not inserted in the CD changer.	Insert the disc magazine with CDs into the CD changer.
No CD is inserted in the CD changer.	Take out the disc magazine and insert CDs.
The CD is dirty.	Clean the CD.
The CD is inserted upside down.	Insert the CD correctly.
The CD changer cannot be operated because of some problem.	Press the reset button of the CD changer.
One or more CDs from the CD changer will not play because of some problem.	Insert another CD.
	The disc magazine is not inserted in the CD changer. No CD is inserted in the CD changer. The CD is dirty. The CD is inserted upside down. The CD changer cannot be operated because of some problem. One or more CDs from the CD changer

2 Indication REP (répétition de la lecture)

1 Commande AMS (détecteur automatique de

appuyez, vous pouvez sélectionner les fonctions

En fonction du côté de la commande sur lequel vous

musique/recherche manuelle)

Indication SHUF (lecture aléatoire)
 Indication DISC NAME (numéro du disque/nom

du disque) Le numéro de disque indiqué correspond au numéro de disque dans le chargeur de disques.

5 Indication TRACK NAME (numéro de plage/ nom de plage)

- 6 Indication MIN (minute)
- 7 Indication SEC (seconde)
- 8 Touches DISC

suivantes.

En fonction du côté de la touche sur lequel vous appuyez, vous pouvez sélectionner les fonctions

9 Touche ►II (lecture/pause)

Guide de dépannage

La liste de contrôle suivante vous assistera dans la correction de la plupart des problèmes que vous pourriez rencontrer avec votre appareil. Avant de passer en revue la liste de vérification ci-dessous, reportez-vous aux procédures de connexion et d'utilisation.

Problèmes généraux

Problème	Cause/solution	
L'appareil ne fonctionne pas.	 Le micro-ordinateur intégré est défaillant. → Appuyez sur la touche de réinitialisation du changeur de CD. Les cordons de raccordement sont mal branchés. 	
Le son saute.	 Le changeur de CD est installé dans un endroit instable. → Réinstallez-le dans un endroit stable. Le CD est souillé ou défectueux. → Nettoyez ou remplacez-le. 	
Le chargeur de disques est mal encastré.	Retirez le chargeur, appuyez sur 📤 et réintroduisez le chargeur jusqu'à ce qu'il s'encliquette correctement en position.	

Affichages d'erreur

Les indications suivantes clignotent pendant environ cinq secondes.

Affichage	Cause	Solution
	Le chargeur de disques n'est pas introduit dans le changeur CD.	Introduisez le chargeur de disques avec des disques dans le changeur CD.
	Aucun CD n'est introduit dans le changeur CD.	Sortez le chargeur CD et introduisez les CD.
	Le disque est sale.	Nettoyez le CD.
	Le disque est placé à l'envers.	Introduisez le CD dans le bon sens.
	Le changeur de CD ne fonctionne pas en raison d'un problème.	Appuyez sur la touche de réinitialisation du changeur de CD.
	Un ou plusieurs disques du changeur CD ne sont pas lus en raison d'un problème.	Introduisez un autre disque.

Si les solutions mentionnées ci-dessus ne peuvent pas résoudre le problème, consultez le revendeur Sony le plus proche.